

Installation and Operating Instructions



AQUA-BEATER

Thank you for purchasing your Aquadial AQUA-BEATER inhibitor. Following the installation instructions below will ensure this product performs as specified.

- The AQUA-BEATER must be fitted on cold water lines only (less than 27°C).
- For the best results, the flow through the AQUA-BEATER should not exceed 8 gallons per minute (0.6 litres per second).
- Do not attach directly to any appliance. The AQUA-BEATER is best installed approximately 1 metre from the point of use. No less than 1 metre when fixed on the cold water feed to any hot water appliance.
- When attaching 3/4" to 15mm or 22mm compression fittings to the AQUA-BEATER body, use approximately five turns of PTFE to help ensure a watertight seal.
- The pipe-work either side of the AQUA-BEATER must be supported by bracketing
- Be sure to follow all applicable water Bylaws and any other appropriate Building Regulations
- The body of the AQUA-BEATER is made of ABS plastic which means installing it on domestic copper pipe-work might interrupt the system earth "bonding". This being the case a suitable earth bonding cable should be fitted to the pipe-work in order to bypass the AQUA-BEATER (see diagram below).

IMPORTANT Must be protected from frost - Do not overtighten

